Flotech Solutions

elster PR6 Installation

Step 1

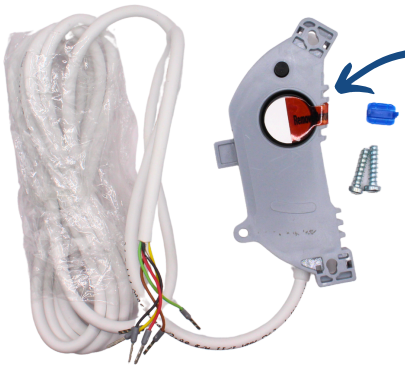

Remove protective sticker from underside of the Sensor

Step 2

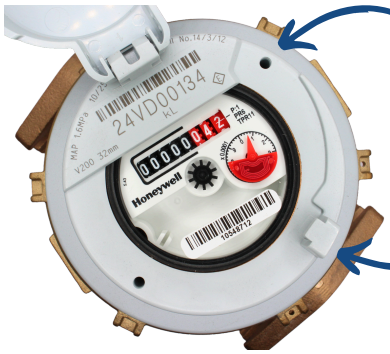

Screw Holes

Locating Lug

Step 3

Insert Screw

Insert sensor guide into locating lug

Insert Screw

Step 4

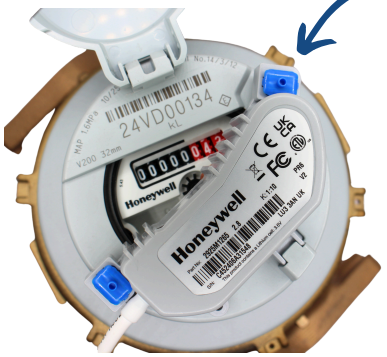

Add Tamper Plugs to Complete

Connection table

Self power types (2925M1221, 2925M1222 and 2925M1224)					
Primary output		Secondary output		Others	
Yellow	White	Red	Green	Brown	Black
All pulses	D.flag	Compensated pulses	C.flag	Tamper	Common

PR6 / PR7 Wiring Guide

Follow the link to the complete wiring guide.